

RIMAGE ALLEGRO™ SERIES

The Winning Combination: High-Speed Desktop Publishing, Full-Color Inkjet Printing, and Powerful Rimage Software Suite

Rimage Allegro disc publishing systems come complete with industry-leading Rimage software in a cost-effective package – an ideal combination for low- or moderate-volume, quality disc production. Publish discs with professional, full-color labels using the newest generation of high-speed, high-quality inkjet printing.

Benefits

Right Size

Choose the system that best matches your needs. The Allegro 20 – a cost-effective option for short jobs – has one recorder, and one bin that holds up to 20 discs. The Allegro 100 has two recorders, and two bins that hold up to 100 total discs. CD/DVD recorders are standard on both models, with optional Blu-ray™ recorder upgrades.

High Speed

Power through projects quickly while getting full-surface, full-color printing in as little as six seconds: the Allegro's high-speed robotics are designed to maximize production.


Rimage Software Suite

Proven, industry-leading software from Rimage is your ticket to success. Rimage Software Suite (RSS) – refined over decades – provides robust and dynamic features for your affordable Allegro disc publishing system. Grant any network user easy access to your Allegro system with the powerful network capabilities of RSS. Web tools within RSS allow remote users to securely access the Allegro system via the internet, without need for software installation. The unique ability of RSS to automatically import, or ingest, data - as well as publish data - makes Allegro a perfect fit for small offices or clinics that receive as well as distribute data.

Rimage Software Suite offers the strongest, most fully-featured Application Program Interface (API) on the market. Interconnect with any software program through strong networking capabilities, two-way program-to-program communication, and a full API feature set. Existing Rimage software integrations can get started with an Allegro system right away.

Features

- 20 (Allegro 20) or 100 (Allegro 100) disc capacity
- External disc output allowing both bins to be utilized for input (Allegro 100 only)
- One (Allegro 20) or two (Allegro 100) CD/DVD recorders (Blu-ray optional)
- Rimage Software Suite (RSS)
- Color inkjet printing at up to 4800 dpi
- All-in-one ink cartridge for ease of use
- USB 3.0 connectivity for high speed data transfer
- Internal lighting for status communication

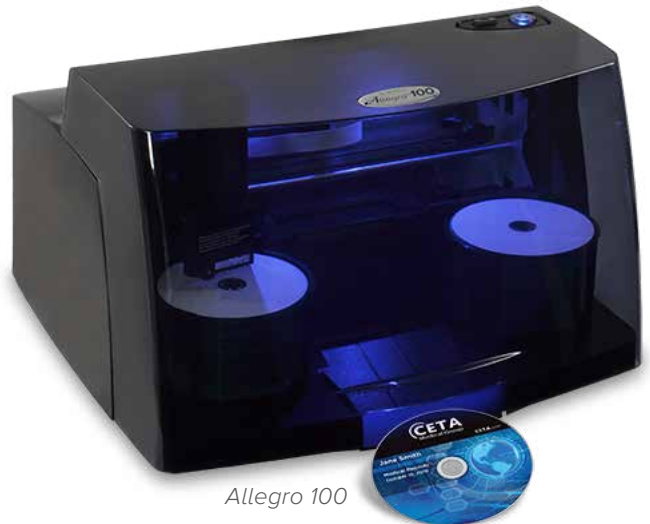

Allegro 100



Allegro 20

Options

- Blu-ray Disc™ recorders

SYSTEM SPECIFICATIONS

	ALLEGRO 20	ALLEGRO 100
Number of Recorders	1	2
Carousel / Total Capacity	1 bin / 20 discs	2 bins / 100 discs
Printer	4800 dpi inkjet	
Rimage Software Suite (RSS)	A full set of software tools enabling unique artwork design, job submission, system management, production monitoring and custom application creation.	
CD Designer™	Label creation software - Included	
QuickDisc™	Disc burning software - Included	
WebRSM™ / Rimage System Manager (RSM)	Control and manage the system, locally or through the web - Included	
Height	7 in / 17,8 cm	11 in / 27,9 cm
Width	15 in / 38,1 cm	17,8 in / 45,2 cm
Depth *	14,75 in / 37,5 cm	17,5 in / 44,5 cm
Weight	17 lb / 7,7 kg	26 lb / 11,8 kg
Power Specifications	100-240 VAC, 60/50 Hz, 5 AMP, 60 Watts	
Warranty	12 months	
Minimum PC Specifications	Please visit the Rimage web site for minimum PC specifications.	

* Allow space (3,5 in or 9 cm) in rear of machine for cabling.

We Recommend

Rimage Maintenance Agreements

Rimage service and support is available globally. Maximize your ROI and minimize downtime when quick problem resolution is a must. With our range of skilled technicians and industry-leading support services, Rimage has a maintenance plan that meets your needs.

Rimage Media Supplies

Rimage all-in-one ink cartridges provide full-color, professional results. Choose Rimage media, specially designed for use in inkjet printers, for optimum performance.

For complete information about Rimage Allegro Series support options and media supplies, visit www.rimage.com.

Blu-ray Disc™ is a trademark of the Blu-ray Disc Association.



Distributed By

HARBTEK
SYSTEMS

www.harb-tek.com

R I M A G E®

Allegro-DS063-1016